

# USING THE ON-SCREEN MENUS

---

The menus make using the receiver and selecting services quick and easy. The receiver displays the menus on the TV screen. Use the menus to communicate with the receiver and to use the receiver features, such as setting security locks, selecting a program, or defining a Favourites List. See the appropriate sections of this chapter for the procedures to use these features.

## OPENING THE MENUS

You can use either of two methods to open the menus:

- To immediately open some of the menus, use the buttons on the remote control that correspond, as follows:
  - Guide** Opens the **Program Guide**.
  - Info** Displays information about a program. For a menu with a Help option, it displays help information for that menu.
  - Menu** Opens the **Main** menu.
  - Left Arrow** Opens **Themes** categories.
  - Browse** Displays the **Browse Banner**.
- Open the **Main** menu, then open any of the other menus from the **Main** menu.

## CLOSING THE MENUS

You can close a menu and return to watching a program by pressing the remote control **View** button, or by repeatedly pressing the remote control **Cancel** button.

**Note:** If you do not do anything in a menu for several minutes, the menu automatically closes. This will discard any changes you made, and display the program you were watching.