

# DISPLAYING PROGRAM INFORMATION WHILE WATCHING A PROGRAM


---

The on-screen **Program Banner** provides information about the program you are watching.

The on-screen **Browse Banner** also provides information about current and future programs, on the current channel or another channel, while you are watching the original program. Both are described below:

## USING THE PROGRAM BANNER

The **Program Banner** provides information about the program you are watching. The receiver displays it for a few seconds at the top of the TV screen every time you change the channel or press the remote control **View** button. The information varies, depending on the specific program, but may include any or all of the items in the following figure:

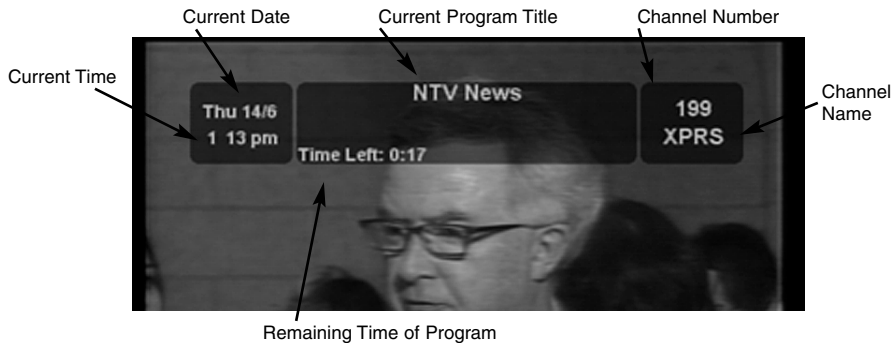

### USING THE BROWSE BANNER






Use the **Browse Banner** to see what other programs are available without changing the current program. The receiver displays information at the top and bottom of the screen and includes the items shown. If the ALL CHAN list is active, all channels are displayed. If another list is active, the **Browse Banner** displays only the channels on that list.

If you have set up the **Program Guide** to hide adult channels and the receiver is locked, the **Browse Banner** does not display such channels.


To open the **Browse Banner**, press the remote control **Browse** button or the **Right** arrow button.



## DISPLAYING THE BROWSE BANNER FOR OTHER PROGRAMS

	Remote Buttons	Menu Options
<p>1. Press the remote control <b>Browse</b> button to open the <b>Browse Banner</b> for the program that you are watching.</p>		
<p>2. <b>Either:</b> Enter the channel number for the desired program, using the number pad buttons.</p> <p><b>Or:</b> Press the <b>Up</b> or <b>Down</b> arrow button to display the desired channel in the bottom part of the <b>Browse Banner</b>.</p>	 	
<p>3. Press the <b>Right</b> arrow button to display the next program. Press the <b>Left</b> arrow button to display the previous program.</p> <p><b>Note:</b> The receiver can display current programs and programs scheduled for an extended time beyond the present, but cannot display programs that have ended.</p>		
<p>4. Press the <b>INFO</b> button for more information about the program listed, if desired.</p>		

## CHANGING CHANNELS USING THE BROWSE BANNER

	Remote Buttons	Menu Options
<p>If you are using the <b>Browse Banner</b> and see a program that you want to watch, press the <b>Select</b> button to change to the new channel. Make sure the program is displayed in the bottom part of the <b>Browse Banner</b>.</p> <p><b>Note:</b> If the program is on some time in the future, the receiver will open the <b>Create An Event Timer</b> menu.</p>		

## *Using The System* *Ordering Pay Per View Programs*

3

### **CLOSING THE BROWSE BANNER**

To close the **Browse Banner**, press the remote control **Cancel** button. The receiver remains tuned to the program you are watching.