





## RESETTING THE RECEIVER

---

If you want to discard changes and reset the receiver to be the same as when it was shipped from the factory, do the following procedure:

Resetting the receiver to the factory default settings discards all Favourites Lists except the ALL CHAN and ALL SUB lists. If you have set security locks on the receiver, and the receiver is locked, these locks will not be discarded.

If the receiver is unlocked, these locks will be discarded. You cannot reset the receiver to default settings to discard a password you have forgotten, nor can an unauthorized person do so to bypass a receiver security lock.

	Remote Buttons	Menu Options
1. Press the <b>Menu</b> button to display the <b>Main</b> menu.		
2. Select the <b>System Setup</b> option to display the <b>System Setup</b> menu.		
3. Select the <b>Installation</b> option to display the <b>Installation and Setup</b> menu.		
4. Select the <b>Factory Defaults</b> option. The receiver displays a warning message, prompting you to confirm that you want to reset the receiver.		
5. Highlight and select the <b>Yes</b> option to confirm the reset. The receiver resets, and then displays the <b>Installation and Setup</b> menu.	