

USING THE ON-SCREEN MENUS

The menus make using the receiver and selecting services quick and easy. The receiver displays the menus on the TV screen. Use the menus to communicate with the receiver and to use the receiver features, such as setting security locks, selecting a program, or defining a Favourites List. See the appropriate sections of this chapter for the procedures to use these features.

OPENING THE MENUS

You can use either of two methods to open the menus:

- To immediately open some of the menus, use the buttons on the remote control that correspond, as follows:
 - Guide** Opens the **Program Guide**.
 - Info** Displays information about a program. For a menu with a Help option, it displays help information for that menu.
 - Menu** Opens the **Main** menu.
 - Left Arrow** Opens **Themes** categories.
 - Browse** Displays the **Browse Banner**.
- Open the **Main** menu, then open any of the other menus from the **Main** menu.

CLOSING THE MENUS

You can close a menu and return to watching a program by pressing the remote control **View** button, or by repeatedly pressing the remote control **Cancel** button.

Note: If you do not do anything in a menu for several minutes, the menu automatically closes. This will discard any changes you made, and display the program you were watching.

MENU OPTIONS

A typical menu option looks like this. First you must highlight the menu option, then you can select it.

1 Program Guide

HIGHLIGHTING A MENU OPTION

To highlight a menu option, use the remote control **Arrow** buttons to move the on-screen highlight to the menu option. When you do this, the option appears lighter than the other option. A highlighted menu option looks like this:

1 Program Guide

SELECTING A MENU OPTION

When you select a menu option, that menu function is immediately performed. You can use either of two methods to select a menu option:

- Press the remote control number pad button that matches the number, if any, of the menu option. If you do this, you do not need to highlight the option first.

Or:

- Move the highlight to the menu option using the remote control **Arrow** buttons. Then press the remote control **Select** button.

User Guide


LISTS OF CHOICES IN THE MENUS

When you make a choice in a list, the receiver does not apply the change until you select the **Save** or **OK** option. If you do not want to save any changes, select the **Cancel** option to discard all the changes made in the menu. There are two types of lists, single selection and multiple selection, as shown in the examples below.

Single selection allows only one choice to be selected at one time. If you select another choice, the previous choice is deselected.



Multiple selection allows multiple choices to be selected at one time. If you select another choice, the previous choices remain selected.

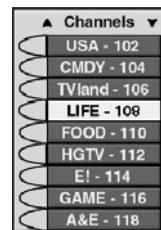

HIGHLIGHTING A CHOICE IN A MENU LIST

Use the remote control **Arrow** buttons to move the highlight to the desired item in the list. The black arrows on the list indicate the direction(s) in which you can move the highlight.


Using The System Menu Options

3


SELECTING A CHOICE IN A MENU LIST

To select a choice in a list, highlight the choice and then press the remote control **Select** button. Make sure you highlight and select the **Save** or **OK** option to save your choice. Highlight and select the **Cancel** option to discard your choice.

When you highlight a choice in a single-selection list, it typically appears as shown here.

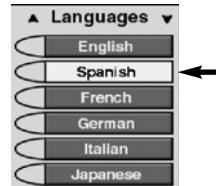

When you highlight a choice in a multiple-selection list, it typically appears as shown here.

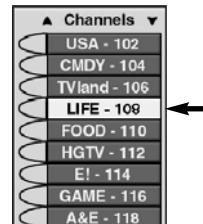

When you select a choice in a list, it looks like this:



OR

