

A

- Available Channels and Programs
- Displaying the Program Guide 3-15

B

- Back Panel, Receiver 2-1
- Banner, Program 3-17
- Banner, Browse 3-17
 - Changing Channels Using the Browse Banner 3-15
 - Displaying the Browse Banner for Other Programs 3-17
 - Using the Browse Banner 3-18
- Buttons
 - Cancel 3-7
 - Control Buttons (Receiver Front Panel) 2-1
 - Guide 3-6
 - Mute 3-5
 - Number Pad Buttons 3-8
 - Power 3-5
 - Recall 3-7
 - Select 3-6
 - TV/Video 3-4
 - Up/Down/Left/Right Arrows 3-6
 - View 3-7
 - Volume 3-5
- Buying
 - Pay Per View Programs 3-19

C

- Canceling a Procedure 3-14
- Changing Channels
- Changing Channels Using the Browse Banner 3-15
 - Channels, Changing 4-6
- Channel 3/4 Switch 2-2
- Channel Order (Program Guide) 3-16
- Channels, Available
 - Displaying the Program Guide 3-15
- Closing the Menus 3-11
- Control Buttons (Receiver Front Panel) 2-1
- Customer Service 1-1

D

- Diagnostic Tests 3-56
- Discarding All Setup Information 3-43
- Displaying Program Information 3-17
- Deleting an Event Timer 3-27

E

- Editing an Event Timer 3-26

F

- Favourites Lists
 - Changing the Name of a Favourites List 3-21
 - Creating or Modifying a Favourites List 3-20
- Making a Favourites List Active 3-21
 - Using Favourites Lists 3-19
- Front Panel 2-1
- Front Panel, Receiver 2-1
 - Control Buttons 2-1
 - Power Light 2-1
 - Smart Card Slot 2-1

G

- Guide, Program 4-5

H

- Highlighting a Choice in a Menu List 3-13
- Highlighting a Menu Option 3-12

I

- Important System Information Menu 3-1
 - Displaying the Important System Information Menu 3-1
- Information
 - Customer Service 1-1
 - Important System Information Menu 3-1
 - Problems and Solutions Tables 4-1
 - World Wide Web home page 1-1
- Installing Batteries 3-4
- Installing the System
 - Ordering Your Programming 3-19

J

- Jack
 - Telephone Jack 2-2

L

- Languages
 - Alternate Audio 3-44
 - Watching Programs in Other Languages 3-44
- Light, Power (Receiver Front Panel) 2-1
- Lists of Choices in the Menus 3-13
- Locks
 - Changing the Receiver Password 3-40
 - Channel Locks 3-37
 - Personal Identification Number 3-42
 - Rating Code Locks 3-36
 - Security Locks 3-33
- Locks, blacked-out programs, and event timers 3-28

M

- Main Menu 2-5
- Menu Options
 - Highlighting a Menu Option 3-12
 - Selecting a Menu Option 3-12
- Menu Structure 2-4
- Menus 2-4
 - Closing the Menus 3-11
 - Favourites Lists 2-6
 - Highlighting a Choice in a Menu List 3-13
 - Important System Information 3-1
 - Lists of Choices in the Menus 3-13
 - Main Menu 2-5
 - Menu Structure 2-4
 - Opening the Menus 3-11
 - Maximum number of event timers 3-26
 - System Locks 2-6
 - Program Guide 2-5
 - Selecting a Choice in a Menu List 3-13
 - System Setup 2-6
 - Theme Categories 2-5
 - Using the On-Screen Menus 3-11

O

- On-Screen Program Guide 2-5, 4-5
- Opening the Menus 3-11

User Guide

Ordering Your Programming 3-1
Overlapping event timers 3-25

P

Pay Per View
 Ordering Pay Per View Programs 3-19
 Pay Per View Programs 4-7
Personal Identification Number 3-42
Power Light 2-1
Problems and Solutions Tables 4-1
Program Banner 3-17
 Using the Program Banner 3-17
Program Guide 2-5, 4-5
 Closing the Program Guide 3-16
 Displaying the Program Guide 3-15
 Setting Up the Channel Order in the Program Guide 3-16
Programs 4-4
 Closing the Program Guide 3-16
 Displaying Program Information 3-17
 Displaying the Browse Banner for Other Programs 3-18
 Displaying the Program Guide 3-15
 Ordering Your Programming 3-1
 Pay Per View Programs 4-7
 Program Banner 3-17
 Program Guide 4-5
 Using the Browse Banner 3-18
Programs, Available
 Displaying the Program Guide 3-15
Power off and event timers 3-28

Q

Quick Record 3-25

R

Rain and Snow Fade 1-10
Receiver 2-1
 Back Panel 2-1
 Control Buttons 2-1
 Front Panel 2-1
 Important System Information Menu 3-1
 Menu Structure 2-4
 Power Light 2-1
 Smart Card Slot 2-1
Receiver Back Panel
 Channel 3/4 Switch 2-2
 Satellite In 2-2
 Super VHS Video 2-2
 Telephone Jack 2-2
 TV Antenna/Cable In 2-2
 TV Set Out 2-2
Receiver Front Panel 2-1
Recording Programs 3-25
Remote Control
 Changing the Digital Remote Address 3-9
 Diagram of the Remote Control 2-3
 Using the Remote Control Buttons 3-4
Reviewing Event Timers 3-26

S

Safety
 Instructions iii
Satellite In 2-2
Satellite Signal Quality 1-10
 Rain and Snow Fade 1-10
 Solar Interference 1-11
Security Locks
 Setting and Using Security Locks 3-33
 Selecting a Choice in a Menu List 3-13

Selecting a Menu Option 3-12
Service, Customer 1-1
Services
 Customer Service 1-1
 World Wide Web home page 1-1
Setting and Using Security Locks 3-33
 Accessing a Locked Item 3-33
 Accessing the and System Locks Menu 3-33
 Entering the Password 3-38
 Setting Locks 3-33
Signal Quality, Satellite 1-10
Smart Card Slot 2-1
Solar Interference 1-11
Setting up the receiver and VCR to use a VCR Event Timer 3-28
System Locks Menu
 Accessing the Menu When You Have Locked the Receiver 3-33

T

Telephone Jack 2-2
Test
 Diagnostic 3-56
Themes
 Listing and Choosing Programs by Themes 3-30
Timers 3-22
Troubleshooting
 Problems and Solutions Tables 4-1
TV Antenna/Cable In 2-2
TV Set Out 2-2

U

Uplink Center 1-2
Using the Browse Banner 3-18
Using the On-Screen Menus 3-11
Using the Program Banner 3-17
Using Timers 3-22

W

Watching Programs in Other Languages 3-44
World Wide Web home page 1-1