

 
2

The Parts of The System

THE SATELLITE DISH

The satellite dish collects the signals transmitted from the satellite. A coaxial cable carries these signals to the receiver, where they are decoded and processed so you can watch satellite television programming.

For installation procedures, see the Installation Instructions. For more detailed installation procedures, see the Installation Kit Guide included in the optional Installation Kit.

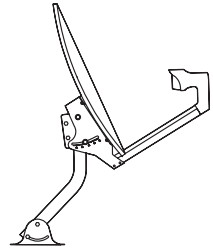

THE RECEIVER

THE RECEIVER FRONT PANEL

POWER LIGHT

This green light on the receiver front panel lights up when the receiver is turned ON, and turns off when the receiver is turned OFF.

 
SMART CARD SLOT

The Smart Card is inserted in this receiver front panel slot. Depending upon your receiver model, the slot may be covered by a door.

CONTROL BUTTONS

The receiver front panel buttons allow you to control the receiver. For information on using these buttons, see Chapter 3 - Using the System.

THE RECEIVER BACK PANEL

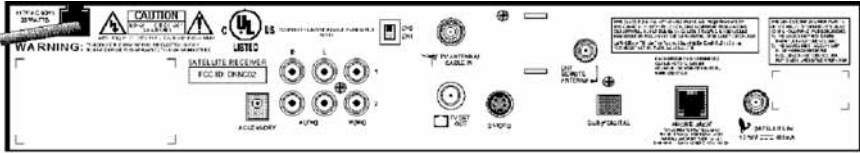

The back panel of the receiver provides the connectors that you use to wire the receiver to all the other electronic devices that you use. It also provides the receiver power cord and telephone jack. Depending on the wiring setup that you use, you may not use some of these connectors, but they are provided to support any desired setup. See Chapter 4 - Reference Wiring the System Together on page 4-1 or the guide included in the optional Installation Kit for more information.

THE REMOTE CONTROL

Note: The remote control is shown below. For information on using the remote control, see Chapter 3 - Using the System.


If you lose or damage the remote control you will not be fully able to control the receiver. If this happens, contact the retail outlet where you purchased your system to order a replacement.

You will be charged the sale price of the remote control, plus shipping and handling.



THE MENU STRUCTURE

The following diagram shows the general structure of the menus that the receiver displays on the television screen. These menus are described on the next few pages.

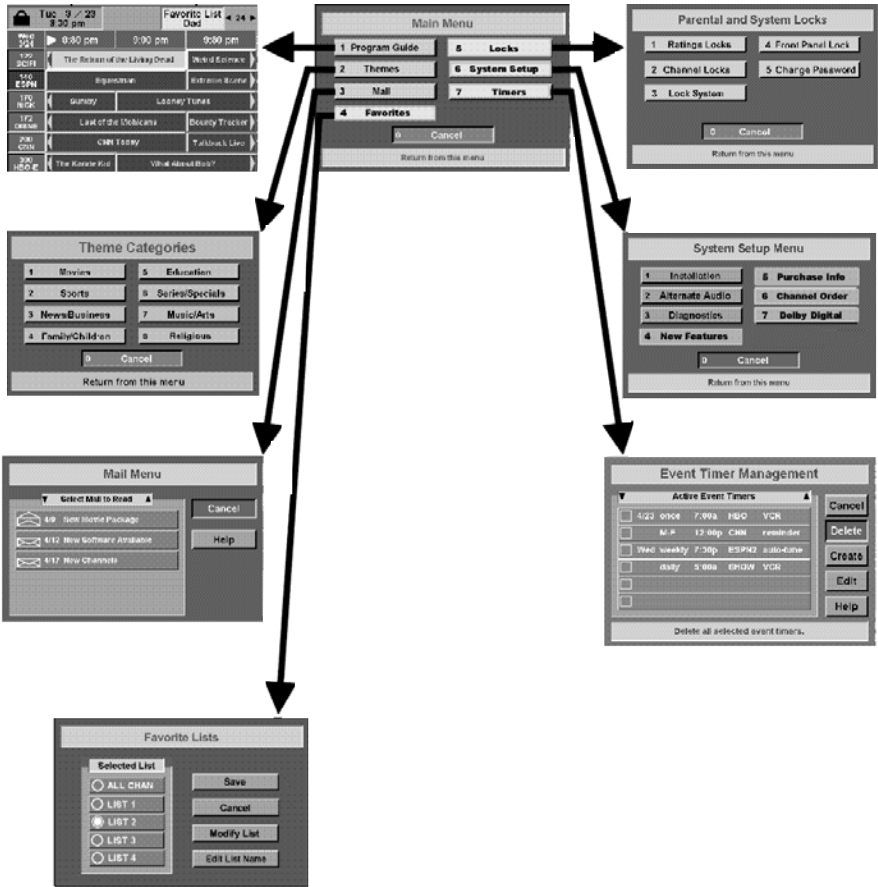 


The Parts of The System

The Menu Structure

2


THE MAIN MENU

 The **Main Menu** is the key to the menu structure. Each option on this menu displays another menu.

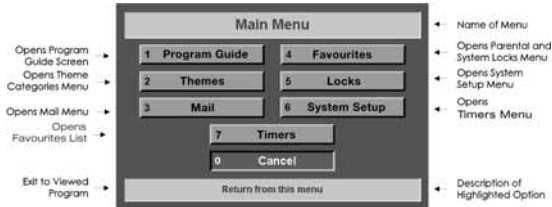


PROGRAM GUIDE

 The **Program Guide** provides a complete listing of the available channels and programs.

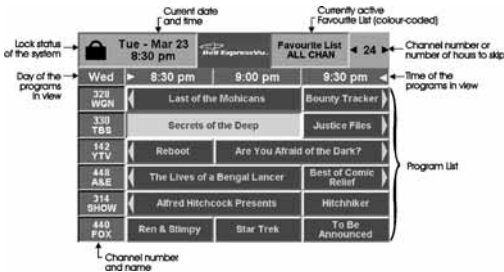

THEME CATEGORIES MENU

 The **Theme Categories Menu** allows you to choose programs based on the theme of their contents.

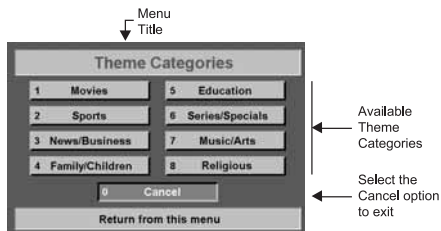


FAVOURITES LISTS MENU

The **Favourites Lists Menu** allows you to create, modify, and activate lists of favourite channels.




PARENTAL AND SYSTEM LOCKS MENU

 The **Parental and System Locks Menu** allows you to set and use security locks.

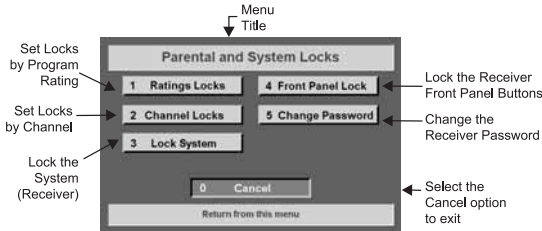

SYSTEM SETUP MENU

 The **System Setup Menu** provides a number of functions that help you set up and maintain the system.

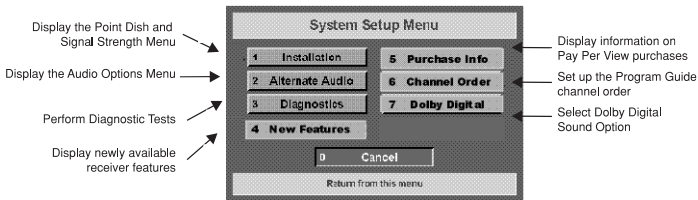


EVENT TIMER MANAGEMENT MENU

The **Event Timer Management** menu allows you to create an Automatic or Manual Event Timer or to Edit an Event Timer.



DOLBY® DIGITAL MENU

 The **Dolby® Digital Setup** menu allows you to listen to surround sound when viewing appropriately encoded satellite broadcasts, if you have a compatible amplifier/decoder.

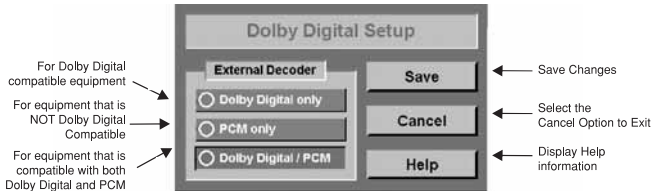

THE BROWSE BANNER

You can use the **Browse Banner** to change channels or to see what other programs are available without changing the current program. Because the **Browse Banner** is transparent, using it will not block out the program you are viewing.

Note: If the ALL CHAN Favourites List is active, the **Browse Banner** displays all the channels. If another list is active, the **Browse Banner** displays only the channels on that list.

The **Browse Banner** information includes the following items.

