

CHANGING PROGRAM LANGUAGES

You may be able to change the language of some programs. An alternate language may not be available for all programs. Some programs, such as movies, show at the start whether an alternate language is available. An alternate language applies *only* to the audio part of a program and does *not* change the language used in the menus displayed by the receiver.

User Guide

Remote Buttons

Menu Options

1. Press the MENU button.
2. Select the **System Setup** option.
3. Select the **Alternate Audio** option.
4. Select the language you want in the **Languages** list.

Note: **Alternate** provides visually-impaired customers with a visual description of the program, if available.

5. Select **Save** to save your language choice.
The receiver displays the **System Setup** menu.
6. Press VIEW TV to exit the **System Setup** menu.

MENU



mno



abc

