

TEACHING ANOTHER REMOTE

Your DISH receiver has the capability to pass certain functions through from the originating receiver remote to another remote.

Note: Although most learning remotes are compatible with the Teach Remote option featured in your DISH receiver, there may be a few that are not. Consult your universal learning remote user's guide for details.

THE REMOTE TEACHING SEQUENCE

Follow these steps to teach (program) a universal learning remote from the remote supplied with your satellite receiver.

Note: The universal learning remote is not supplied with your receiver. You can purchase it separately at an electronics supply store.

Remote Buttons Menu Options

1. Press the MENU button.



2. Select the **System Setup** option.



3. Select the **Diagnostics** option. The receiver displays the blank **System Diagnostic Tests** screen.



4. Select the **Teach Remote** option.
The receiver displays a pop up screen warning that you must press any button on the front panel in order to quit the teaching mode.

5. If you want to continue, select the **Yes** option.
The receiver now displays the **System Diagnostic Tests** screen containing further instructions:



6. Aim both remotes at the receiver. Press one button at a time on your DISH remote, while pressing the button to be taught on the universal learning remote at the same time. Repeat this process for each button you want to be taught to the learning remote.

Note: Any button on the DISH remote that is not used with your DISH receiver, will not teach the universal learning remote.

7. You can quit the teaching mode at any time by either of the two following methods:

- Press any front panel button on your receiver.
- Leave the receiver alone for at least three minutes.

8. The receiver again displays the blank **System Diagnostic Tests** screen. You can cancel out of this screen back to your original viewing screen.