

USING THE MENUS

Menus displayed on the TV screen make using the receiver and selecting programs quick and easy. Use the menus to control the receiver and to use its features, such as setting locks, choosing a program, or creating a **Favourites List**.

OPENING THE MENUS

You can open the menus in either of two ways:

- Press MENU to open the **Main Menu**, then select any of the other menus from the **Main Menu**.
- Use the matching button on the remote control. For example, to open the **Program Guide**, press GUIDE.


CLOSING THE MENUS

To close a menu and return to watching a program, press the remote control VIEW TV button, or the remote control CANCEL button.

Note: The menu closes if you do not do anything in a menu for several minutes. Any unsaved changes you made will be lost.

MENU OPTIONS

A menu option looks like this.



1 Program Guide

HIGHLIGHTING A MENU OPTION

To highlight a menu option, use the remote control ARROW buttons to move the on-screen highlight to the menu option. When you do this, the option appears lighter than the other options. The highlight is like the one that you may have seen on a computer screen.

Compare the highlighted menu option with the non-highlighted menu option in the previous example.



SELECTING A MENU OPTION

When you select a menu option, that option takes effect right away. You can select a menu option in either of two ways:

- If the option has a number next to it, press the number on the remote control number pad that matches this number. If you do this, you do not need to highlight the option first.
- Move the highlight to the menu option using the remote control ARROW buttons. Then press the remote control Select button.

LISTS OF CHOICES IN THE MENUS

*When you make a choice in a list, the receiver does not apply the change until you select the **Save** or **OK** option.* If you do not want to save any changes, select the **Cancel** option to discard all the changes made in the menu.

There are two types of lists:

- A *single choice* list allows you to select only one choice at a time. If you select another choice, your previous choice is deselected.
- A *multiple choice* list allows you to select more than one choice at one time. If you select another choice, your previous choice(s) stays selected.

HIGHLIGHTING A CHOICE IN A MENU LIST

Use the remote control ARROW buttons to move the highlight to the desired item in the list. The black arrows on the list show where you can move the highlight.

SELECTING A CHOICE IN A MENU LIST

To select a choice in a list, highlight the choice and then press the remote control SELECT button. Make sure you select the **Save** or **OK** option to save your choice. Select the **Cancel** option to discard your choice.

When you highlight a choice in a single choice list, it looks like this. In this *example*, the **Spanish** option is highlighted.



When you highlight a choice in a multiple choice list, it looks like this. In this *example*, the **RDI-102** option is highlighted.



When you select a choice in a list, it looks like this:



OR



CANCELING A PROCEDURE

To cancel a procedure, you must press the remote control CANCEL or VIEW TV button *before* you do the last step of the procedure. If this does not work, you *must* finish the procedure.