

USING FAVOURITES LISTS

Favourites Lists allow you to display only your favourite channels in the Program Guide. You can create and change the lists yourself, adding and removing channels as you wish. Channels saved as favourite channels must be grouped but they must be grouped into no more than four lists.

- When you make a **Favourites List** active, the **Program Guide** displays *only* the channels in that list. Also, the receiver skips channels that are not on the list when you use the remote control UP or DOWN ARROW button to change channels.
- The **All Chan Favourites List** contains all the channels. You *cannot* make any changes to the **All Chan** list.
- The **All Sub Favourites List** contains all the channels in your subscription. You *cannot* make any changes to the **All Sub** list, except by changing your subscription.
- Each **Favourites List** has a unique colour in the **Program Guide**. You can give each list a name. When you first get the receiver, the four lists are named **List 1**, **List 2**, **List 3**, and **List 4**. The lists are empty until you add channels to them.

CREATING OR CHANGING A FAVOURITES LIST

You can create, add channels to, and remove channels from, a **Favourites List**.

Remote Buttons

Menu Options

1. Press the MENU button.
2. Select the **Favourites** option.
3. Select the **Favourites** List that you want to create or change.
4. Select the **Modify List** option.
Note: At any time you can select the **Clear List** option to remove all channels from the current list. This does *not* apply to the **All Chan** and **All Sub**.
5. In the **Channels** list, highlight a channel you want to add to the **Favourites List**.
Note: You can use the number pad buttons to enter the channel number, or select the PAGE UP or PAGE DOWN option to move quickly through the list.

MENU



ghi



6. Press the SELECT/OK button to add the highlighted channel to the **Favourites List**. A check mark appears next to the channel.
7. Repeat steps 5 and 6 until you have added all the channels that you want.
8. To delete a channel from the **Favourites List**, select the channel in the list. The check mark next to the channel disappears.
9. Select the **Save** option to save all changes to the **Favourites List**.



MAKING A FAVOURITES LIST ACTIVE

If the **Program Guide** is open, press the GUIDE button to select the next **Favourites List**. Press the GUIDE button again to scan through all the available lists.

CHANGING THE NAME OF A FAVOURITES LIST

Remote
Buttons

Menu Options

1. Press the MENU button.
2. Select the **Favourites** option.
3. Select the **Favourites List** that you want to change.
4. Select the **Edit List Name** option to open the virtual keyboard.
Note: You cannot change the name of the **All Chan** or **All Sub** list.
5. Select a letter in the keypad area on the screen. Repeat to spell out the desired name. You can enter up to eight characters, including spaces. If needed, select the **space** option to insert a space in the name or the **<back** option to correct a letter.

MENU



ghi



Note: A list *must* have at least one character. Two lists *cannot* have the same name.

Note: At any time, you can select **Clear** to clear the name.

6. Select **Save**.