

10 *Remote Control Setup*

PERSONALIZING YOUR REMOTE CONTROL


Use the information in this chapter to learn more about using your remote control.

- **IMPROVING RECEIVER CONTROL**
- **CONTROLLING OTHER COMPONENTS**
- **THE RECOVER BUTTON**

User Guide

IMPROVING RECEIVER CONTROL

These instructions help you improve your remote control settings to best operate your satellite receiver. Use the following instructions to make your remote control operate more efficiently with your receiver.

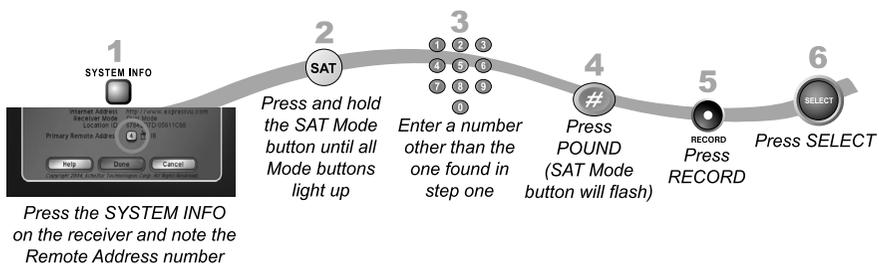


1. Press SYSTEM INFO on the receiver's front panel. The System Information screen displays on the TV and shows the Remote Address.
If changing the address for Remote Control, write down the Primary Remote Address: _____
2. Press and hold SAT on your remote control for about three seconds, until all of the mode buttons light up, and then let go of SAT.
3. Use the NUMBER PAD to enter any number between 1 and 16, but not the one you wrote in step 1.
4. Press POUND (#). If you entered the address correctly, SAT will flash three times.
Write down the number you entered: _____
5. Press RECORD. Make sure the Remote Address you see on the System Information screen is the same as the one you entered in step 3. If it isn't, the remote cannot control the receiver.
6. Press SELECT to close the System Information screen.

Remote Control Setup Improving Receiver Control

10

CHECKING THE REMOTE CONTROL ADDRESS


You can see what address is programmed on the remote control by completing the following instructions.

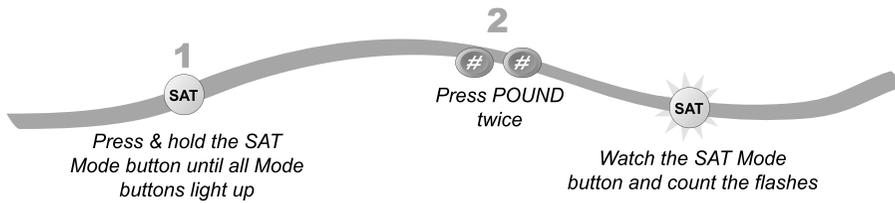

1. Press and hold the SAT mode button for three seconds, until all of the mode buttons light up, and then let go of the SAT button.
2. Press POUND (#) twice. The SAT mode button will flash the same number of times as the address number (three flashes means address 3).

CONFIRMING REMOTE CONTROL OPERATION

Complete the following from the to make sure the remote operates the receiver:

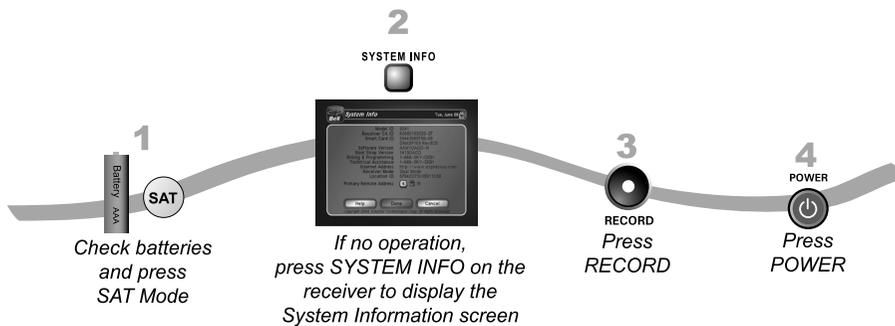

1. Make sure the remote has fresh batteries and is in SAT mode.
2. Press SYSTEM INFO on the receiver front panel to display the System Info screen on the TV.

User Guide

3. Press RECORD on the remote control:

- Remote Control - The Primary Remote Address in the System Info screen changes to match the address preset in your remote control.

4. Press POWER on the remote control to turn on/off receiver.

ADJUSTING THE REMOTE ANTENNA

Be sure to set the remote control antenna (back of the receiver) straight up so you can use the remote control from as far away as possible. Don't let the antenna touch anything.



If your UHF Pro Remote Control isn't working very well from far away, you may be experiencing interference from objects near your receiver. To improve your remote control's range, try the following:

- Place the receiver higher than all of the other equipment in your entertainment center.
- Provide room above the receiver so that the antenna can be installed straight up. If this is not possible, tilt the UHF antenna at about a 30° angle.
- Place the UHF antenna outside the entertainment center by using a coaxial cable to connect the antenna to the receiver.
- Try moving the receiver to other locations.
- Move any nearby off-air antennas away from the UHF remote antenna. Do not place an off-air antenna on top of your receiver.
- Install a UHF attenuator. See *Installing a UHF Attenuator* in the following section for details.

CHANGING THE UHF FREQUENCY USING THE A/B SWITCH

1. Remove the battery cover from the remote control.
2. Use a small screw driver or a paper clip to carefully change the setting.
3. Put the battery cover back on the remote control.
4. Use the SYS INFO button on the front panel to open the **System Information** screen.
5. Press RECORD on the remote control.
6. Make sure the **System Information** screen shows the correct band information:
 - Switch position A - **IR/UHF Pro Band A**
 - Switch Position B - **IR/UHF Pro Band B**




Remote Control Setup Improving Receiver Control

10


INSTALLING A UHF ATTENUATOR

Unwanted UHF signals may interfere with signals from the remote control to the receiver. To prevent such interference, you can install a 10 dB attenuator (available from many consumer electronics parts stores). Adding this attenuator will help keep out stray UHF signals, but it also cut down how far away you can use the remote control.


1. Remove the UHF antenna from the UHF Remote Antenna input on the receiver back panel.

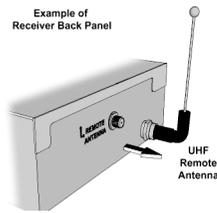

2. Attach a 10 dB attenuator to the UHF Remote Antenna input.

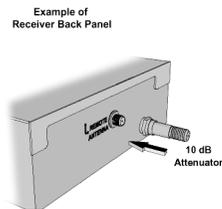

3. Attach the UHF antenna to the attenuator.

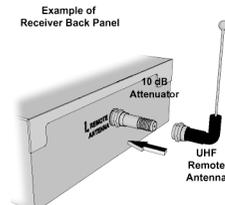

User Guide

CONTROLLING OTHER COMPONENTS

To use the remote to control other devices (such as a TV, VCR, DVD player, tuner, amplifier, or Bell TV satellite receiver), you must first program it to control these other devices. You can do this by either following the instructions in *Setting Up Using Device Code Tables* on page 10-6, or the *Setting Up Using Device Codes Scan* procedure described on page 10-8.

REMOTE CONTROL MODES

Use the remote control's mode buttons, SAT (satellite receiver), TV (for a TV), VCR (for a VCR or a DVD player), and AUX ("auxiliary," for a second TV, a VCR, a tuner, an audio amplifier, or a second Bell TV satellite receiver) to set the remote to the right mode for the device. To change the mode, press the button for the device you want the remote to control. The mode button lights for two seconds to show you've set the remote to that mode.

LIMITED MODE

You can program your remote control in Limited Mode to keep from accidentally changing the channel on your TV or VCR. When you use the remote to control your TV in Limited Mode, you will only be able to use POWER, MUTE, and VOLUME. Also, when you use the remote to control your VCR in Limited Mode, you will only be able to use POWER and the VCR function buttons.

TURNING LIMITED MODE ON AND OFF

The section *Setting Up Using Device Code Tables* has a step that tells the remote control to go into Limited Mode. You can use this feature to limit the functions of a TV or VCR you control with the remote in TV, VCR, or AUX mode. Here's a simple way to turn Limited Mode on and off anytime:

1. Press and hold the mode button (for example, TV) until all of the mode buttons light. Release the mode button.
2. Press:
 - PAGE UP to turn Limited Mode on.
 - PAGE DOWN to turn Limited Mode off.
3. Press POUND.

Note: Limited Mode is not used with amplifiers.

COMBINATION DEVICES


If you are programming the remote to control a combination device, such as a TV/VCR or a TV/DVD, program the remote control in one mode, and then repeat the procedure in the other mode. For example, to program the remote to control a TV/VCR using code 748, follow the instructions to program the remote to control the TV using code 748, and then repeat the instructions for the VCR using the same code.

SETTING UP USING DEVICE CODE TABLES

Set up the remote to control other devices using the device codes listed on page 13-15. In the instructions below, the column on the left contains the instructions and the column on the right provides additional information.

Remote Control Setup Controlling Other Components

10

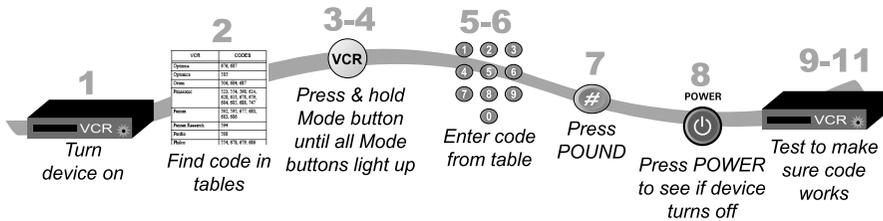

Instructions

1. Turn the device on.
2. Find the brand name of the device in the tables starting on page 13-15.
3. Press and hold the mode button until all the other mode buttons light up, and then let go of the button. The mode button flashes.
4. *For AUX mode only.* Press 0 for a second TV, or 1 for a second VCR, or 2 for a tuner, or amplifier.
5. Enter one of the three-digit device codes from the table using the number buttons.
6. If you want to program Limited Mode, press 1. If not, skip to step 7.
7. Press POUND (#).

Additional Information

Use the device's front panel buttons or its remote control.

If the brand isn't listed, see Setting Up Using Device Codes Scan on page 10-8.

For example, hold TV for a TV until all of the other mode buttons light. When you let go, TV will flash.

This step is for programming which kind of device that should be programmed in AUX mode. If you're not programming in AUX mode, skip to step 5.

The three-digit device code should be for the brand name of your device that you found in step 2.

See *Limited Mode* for more information.


If you entered the code correctly, the mode button flashes three times.

User Guide

Instructions	Additional Information
8. Press POWER to turn off the device. If the device does not turn off, go to step 10.	If the code works, the device should turn off.
9. Turn the device back on and try some other buttons to make sure they work. If the code works for other buttons, stop here.	Sometimes POWER works when other buttons don't. If in Limited Mode, try VOLUME or MUTE.
10. If the code doesn't work, redo steps 3 through 9 with another device code from the tables.	Try every code listed for your brand until one works for your device.
11. If you can't find a code that works try, <i>Setting Up Using Device Codes Scan</i> that follows.	

SETTING UP USING DEVICE CODES SCAN

If the code for your device is not listed in the tables starting on page 13-15, use this procedure to scan the remote control's memory for the device code. In the instructions below, the column on the left contains the instructions and the column on the right provides additional information.

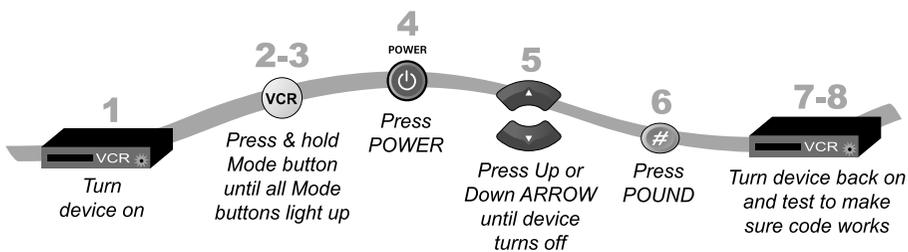

Remote Control Setup Controlling Other Components



Instructions


Additional Information

- | | |
|---|--|
| <p>1. Turn the device on.</p> <p>2. Press and hold the mode button until all the other mode buttons light up, and then let go of the button. The mode button flashes.</p> <p>3. <i>For AUX mode only.</i> Press 0 for a second TV, or 1 for a second VCR, or 2 for a tuner, or amplifier. Then press the STAR (*) button.</p> <p>4. Press POWER.</p> <p>5. Press the UP or DOWN ARROW repeatedly until the device turns off.</p> <p>6 Press POUND (#).</p> <p>7. Turn the device back on and try some other buttons to make sure they work.</p> <p>8. If necessary, repeat this procedure until you've tried all the codes.</p> | <p>Use the device's front panel buttons or its remote control.</p> <p>For example, hold TV for a TV until all of the other mode buttons light. When you let go, TV will flash.</p> <p>This step is for programming which kind of device that should be programmed in AUX mode. If you're not programming in AUX mode, skip to step 4.</p> <p>This puts your remote in the scan mode.</p> <p>As you press the UP or DOWN ARROW, the remote tries each code in the memory to see if it can turn off your device. When the device turns off, you have found a code that might work.
Note: The mode button for the device will flash rapidly eight times when you've scanned all the codes for that device.</p> <p>The mode button flashes three times if you have entered the code correctly. This stores the code you found.</p> <p>Try some other buttons to make sure they work. Sometimes POWER works when other buttons don't. If using Limited Mode, try VOLUME or MUTE.</p> <p>You may need to repeat the scan to find the best code for your device.</p> |
|---|--|

User Guide

CHECKING THE DEVICE CODES

You can find out what device code you've set for each remote control mode (TV, VCR, and AUX).

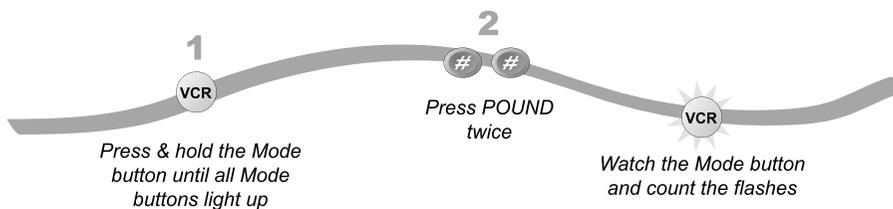

Instructions

1. Press and hold the appropriate mode button until all the other mode buttons light up, and then let go of the button. The mode button flashes.
2. Press the Pound (#) button twice. Watch the mode light to determine your code. The mode button flashes the number for each digit of the device code, with a pause between the groups of flashes. A quick flash is for zero.

For AUX mode: The first group of flashes tells you what the AUX mode controls. A quick flash (zero) before the three-digit code is for a TV; one regular flash is for a VCR; and two flashes is for a tuner, or amplifier.

For a satellite receiver programmed in AUX mode: The AUX mode button will flash the same number of times as the address number.

Additional Information

For example, hold TV for a TV until all of the other mode buttons light. When you let go, TV will flash.

For example, if the code is 570, the mode button flashes five times, pauses, flashes seven times, pauses, and flashes once quickly.

For example, if the TV code is 570, the AUX mode button flashes once quickly (indicating 0 for TV), pauses, flashes five times, pauses, flashes seven times, pauses, and flashes once quickly.

For example, if the receiver address is 3, the AUX mode button flashes three times.

Remote Control Setup Controlling Other Components

10

Instructions

For Limited Mode: If you have programmed a TV or VCR in Limited Mode, the mode button flashes once at the end of the flash sequence.


Additional Information

For example, if the TV code is 570, the AUX mode button flashes once quickly (indicating 0 for TV), pauses, flashes five times, pauses, flashes seven times, pauses, flashes once quickly, and then flashes once (indicating Limited Mode).

CONTROLLING A TUNER/AMPLIFIER

Use the following remote control buttons to control a tuner or amplifier. When the remote control is set up as described on pages 10-6 and 10-11, press the AUX mode button to set the remote to AUX mode. The AUX mode button will stay lit for two seconds to show you've set the remote to AUX mode. Make sure to keep the remote in AUX mode to use the following buttons.

To use the features described in this section, make sure you are in AUX mode by pressing the AUX Mode button. 

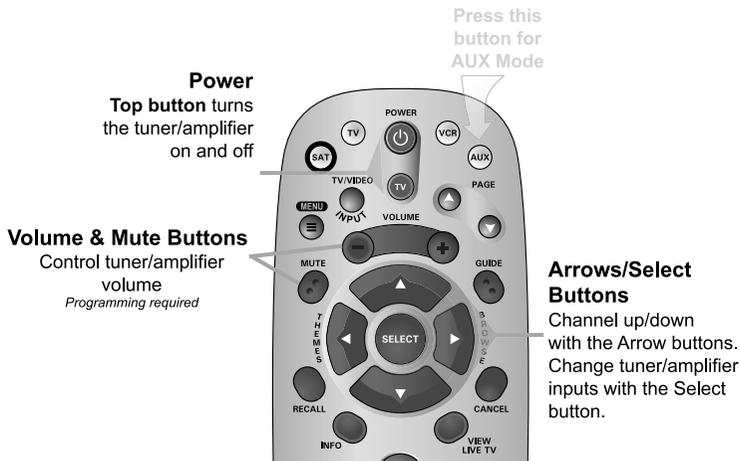


SWITCHING BETWEEN TV AND DEVICE VOLUME CONTROL


When you set up the remote to control a TV, the mute and volume buttons control the TV volume. However, if you want to use the AUX mode to control a tuner or amplifier and the device has a volume setting, you can set up the remote to control the device's volume instead of the TV volume. Be sure to set up the remote to control a device in AUX mode before using this feature.

User Guide

To set the remote to control the device's volume:

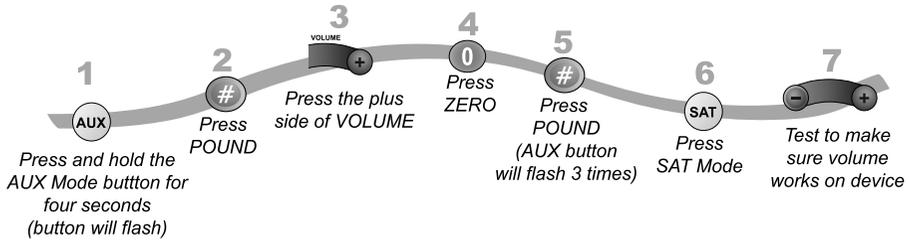

To set the remote back to control the TV volume:

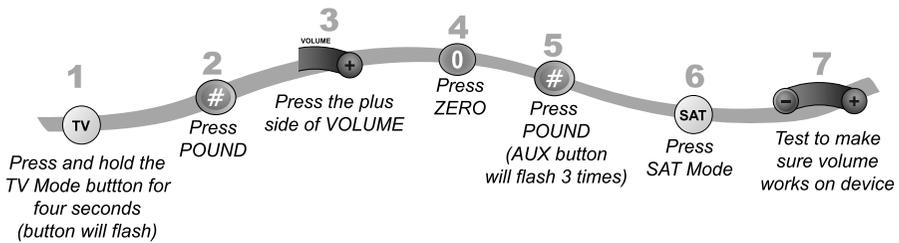

Remote Control Setup The Recover Button



THE RECOVER BUTTON

Use RECOVER if you suddenly have a snowy, blue, or black screen on your TV and cannot get the picture back from your satellite receiver. When you press RECOVER as described below, the remote control sends commands to your TV to change channels or video inputs to get back to watching satellite programming. This procedure works only if you have accidentally changed the TV channel or video input. It does not recover lost satellite signal (See *Troubleshooting* on page 13-2 for information on solving problems).

Note: The remote must be programmed to control the TV (and VCR, if applicable) for RECOVER to work as described.


Note: RECOVER will first try to tune your TV to channel 3, then channel 4, and then other video inputs with each press of RECOVER. You may need to press RECOVER up to 30 times to recover your satellite TV video. If RECOVER is programmed to a specific channel (see page 10-15), RECOVER will tune the TV to the specific channel (for example, channel 60).

User Guide

USING THE RECOVER BUTTON

The following setup is required to use RECOVER:

- The remote control must be set up to control the TV and, if installed, the VCR.
- If a VCR is installed, make sure it is connected as shown on page 12-12.

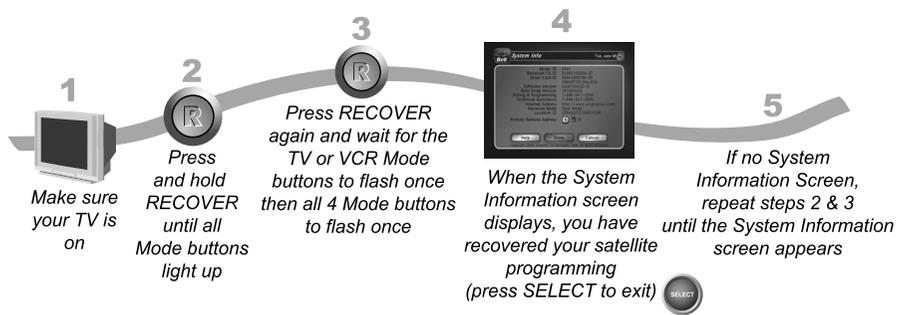

Note: Press any remote control button other than RECOVER to end this procedure.


Note: If RECOVER is not programmed to other inputs, RECOVER will first try to tune your TV to channel 3, then channel 4, and then other video inputs with each press of RECOVER. You may need to press RECOVER up to 30 times to recover your satellite TV video. If RECOVER is programmed to a specific channel (see page 10-15), RECOVER will tune the TV to the specific channel (for example, channel 60).

Remote Control Setup The Recover Button

10

REMOVING THE RECOVER BUTTON CHANNEL PROGRAMMING

The following instructions describe how to reset RECOVER to restore satellite TV viewing by tuning your TV (or VCR) to channel 3, 4, and other inputs.

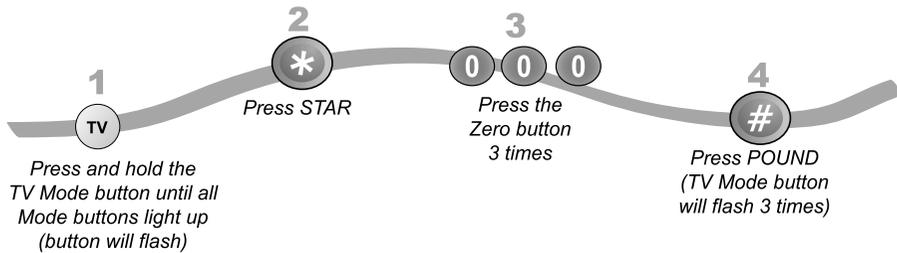

User Guide

TIPS

- If you don't want to accidentally change channels on your TV or VCR, try programming the remote control in Limited Mode as described on page 10-6.

QUESTIONS

- **My remote doesn't control my receiver or other components. What should I do?**
 - Put the remote control in the correct mode (page 10-6).
 - Check the batteries (page 2-7).
 - Check the remote control address (pages 10-3 and 10-10).
 - Check the UHF antenna (page 2-7).
 - Adjust the UHF antenna (page 10-4).
- **Why does my receiver change channels or display menus at random?**

Your neighbor may have their remote control set on the same address. Change the address on your remote control and receiver as described on page 10-2. If that doesn't help, you may have to install a UHF attenuator as described on page 10-5.